



Initial Disassembly

How to disassemble the Sansa e250 to fix or replace the innards.

Written By: Lauren





TOOLS:

- [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Sansa e250




- Use a #0 Phillips head screwdriver to remove the four small black screws from the back of the device.
- ⓘ To ensure you don't lose any tiny parts during the replacement process, place parts on the white magnetic sheet.
- Once the screws have been removed, proceed to take off back cover.

Step 2



- Now, proceed to lift the battery out and remove it.

Step 3

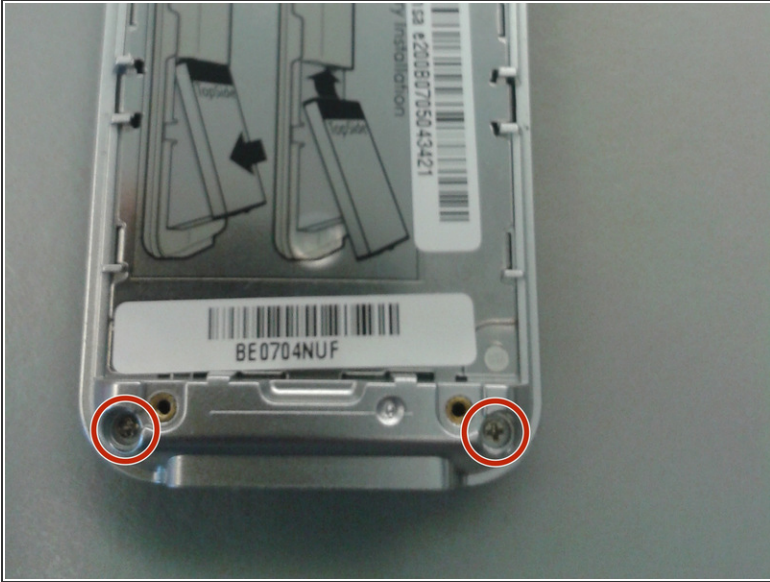

- Use a #0 Phillips screwdriver to remove the four small silver screws from the outside corners of the battery housing.

Step 4



- Now gently pry the front cover off. A Black Spudger can be used to assist in the removal of the cover.

Step 5



- Gently separate the mainboard from the battery housing. This may be difficult around the headphone jack. Use a spudger if necessary.
- Pull the motherboard out and down away from the top of the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-18 09:02:57 PM.